




1. Rimuovere sella.
 Remove the seat.

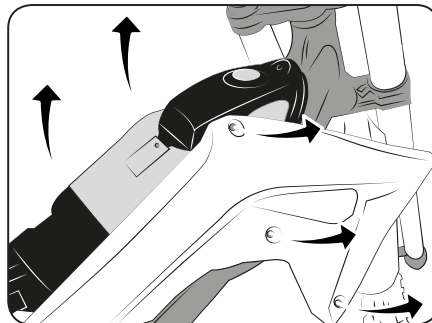


2. Rimuovere fianchetti.
 Remove the radiator shrouds.

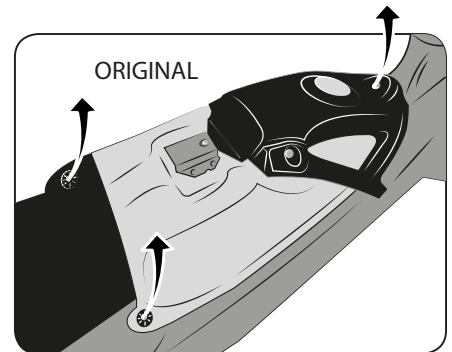


3. Svitare viti e rimuovere serbatoio.
 Unscrew the tank screws and remove the OEM fuel tank.

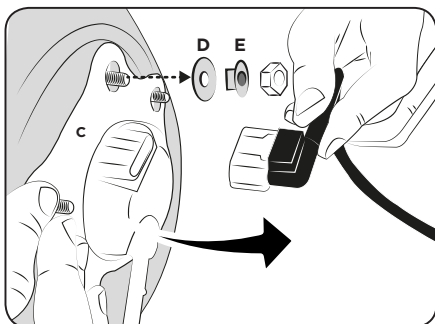


4. Svuotare serbatoio da benzina e scollegare utenze. Rimuovere boccole, rondelle e dadi.
 Make sure the fuel has been removed from the tank, then disconnect the power cable from the fuel pump and remove the fuel pump hardware (D) & (E).

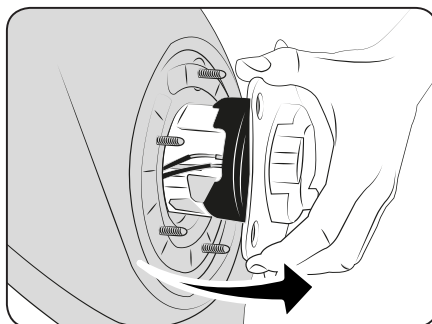

5. Rimuovere pompa.
 Remove the fuel pump.

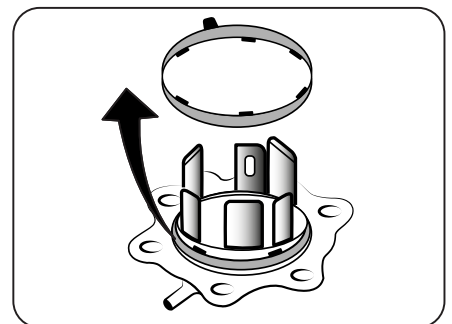


6. Rimuovere la guarnizione originale.
 Remove the original seal from the fuel pump.

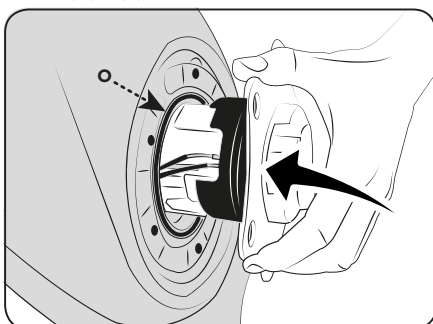


7. Inserire O Ring (O) nella sede del serbatoio Acerbis. Inserire pompa su serbatoio Acerbis.
 Install the fuel pump with the supplied (M) bolts and the OEM bushings and washers.

ATTENZIONE: In caso futura manutenzione della pompa, sostituire l'O Ring con quello fornito di ricambio.
 Insert the supplied O-Ring (O) against the Acerbis tank and insert the fuel pump. *An extra O-ring has been supplied for future maintenance.

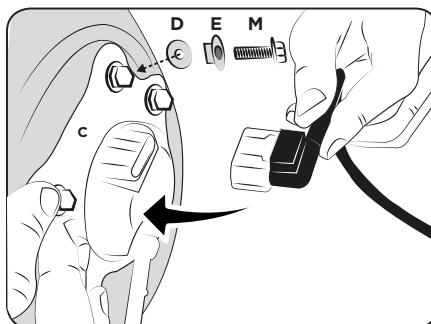


8. Riavvitare pompa e collegare utenze.
 Install the fuel pump with the supplied (M) bolts and the OEM bushings and washers.

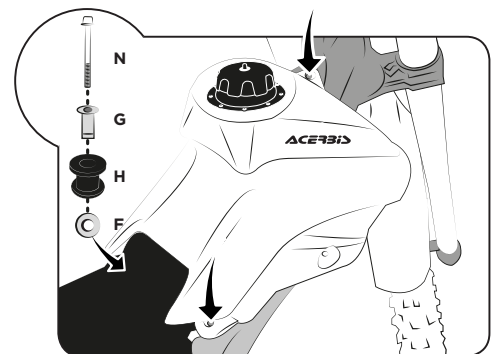


9. Montare serbatoio Acerbis
 Install the Acerbis tank (A) using the supplied hardware (N), (G), (H), and (F) as indicated in the diagram.


COD. 500005675 REV3

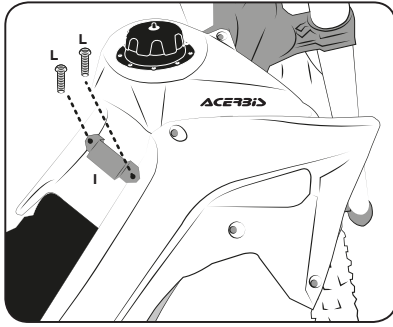

10. Montare staffa.
Install the bracket (I) and fasten with
the (L) screws.

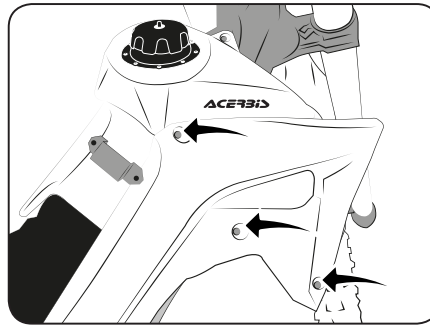

11. Rimontare fianchetti fissando per prima la vite
radiatore.
Install the radiator shrouds.

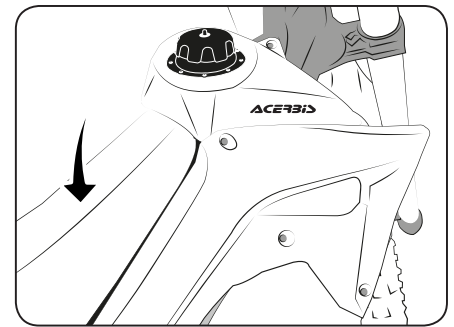

12. Rimontare sella.
Install the seat.

ACERBIS®

Thank you for purchasing an ACERBIS fuel tank

WARNING

It is **EXTREMELY IMPORTANT** that the fuel tank be properly installed. To ensure proper installation, it is **STRONGLY RECOMMENDED** that the tank be installed only by a qualified OEM licensed dealership mechanic. Improper installation could result in serious injury or even death.

If self-installed NOTE THE FOLLOWING. Particular attention must be paid to excessive fuel line length and fuel line proximity to hot engine areas and pipes to prevent fire.

Clean tank interior thoroughly before installation. Install this fuel tank only in a well ventilated area, as gasoline fumes are extremely dangerous. Do not start or operate the vehicle if there are any fuel leaks! Read all instruction first before beginning installation.

DISCLAIMER

Due to uncontrolled variables in the manufacturing process of rotationally molded fuel tanks, the fuel tank may vary in size and shape by up to 7% of the manufacturer's original listed capacity.