


FUEL TANK HONDA CRF450R 11,5L - 3 GAL SERBATOIO HONDA CRF450R 11,5L - 3 GAL

COD. 500005675 REV.5

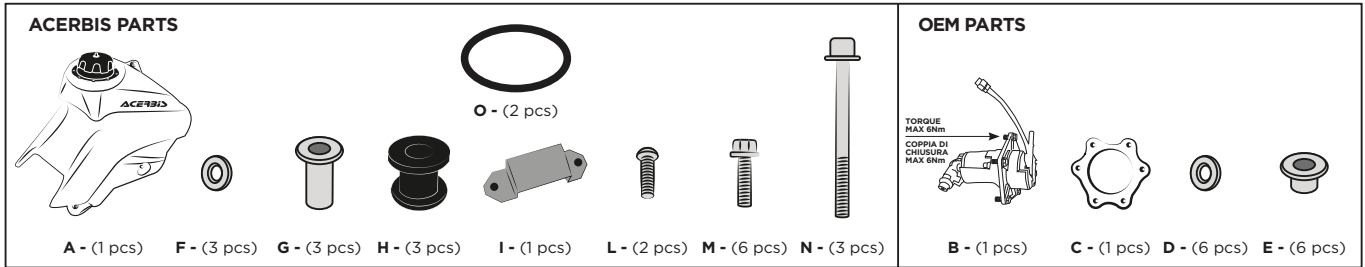


WARNING




Durante il rimontaggio suggeriamo vivamente di utilizzare un grasso anti-grippante su tutte le viti.


Highly suggest to use anti-seize/grease lubricant on all bolt threads going into the tank's metal inserts when reinstalling.

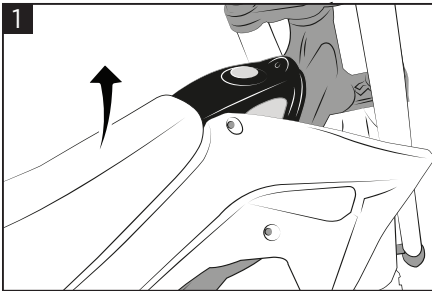


1
Remove the seat.
Rimuovere la sella.

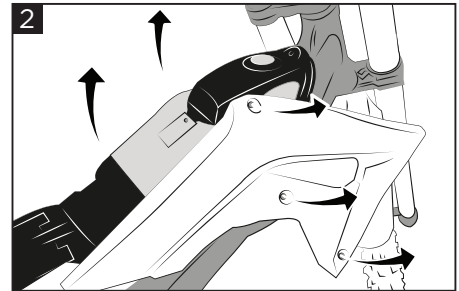


2
Remove the radiator shrouds.
Rimuovere i fianchetti.

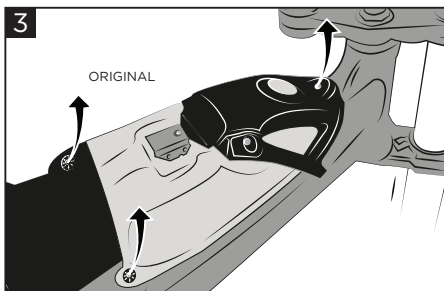

3
Unscrew the tank screws and remove the OEM fuel tank.
Svitare le viti e rimuovere il serbatoio.

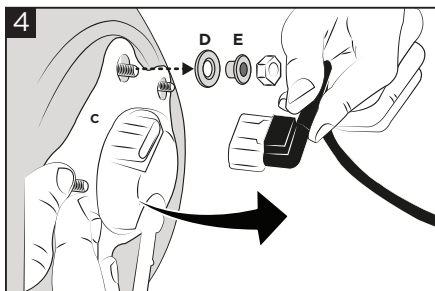

4
Make sure the fuel has been removed from the tank, then disconnect the power cable from the fuel pump hardware (D) and (E).
Svuotare serbatoio da benzina e scollegare utenze. Rimuovere boccole (E), rondelle (D) e dadi.

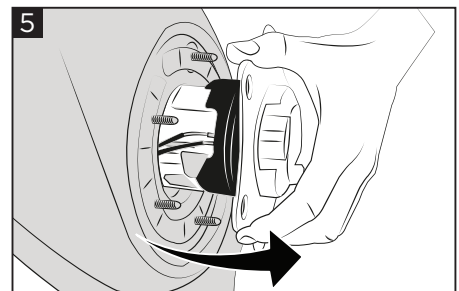

5
Remove the fuel pump.
Rimuovere la pompa.

WARNING!

It is EXTREMELY IMPORTANT that the fuel tank is properly installed. To ensure proper installation, it is STRONGLY RECOMMENDED that the tank is installed only by a qualified OEM licensed dealership mechanic. Improper installation could result in serious injuries or death.

If self-installed NOTE THE FOLLOWING: particular attention must be paid to excessive fuel line length and fuel line proximity to hot engine areas and pipes to prevent fire.

Clean tank interior thoroughly before installation. Install this fuel tank only in a well ventilated area, as gasoline fumes are extremely dangerous. Do not start or operate the vehicle if there are any fuel leaks! Read all instructions first before beginning installation.

EUROPE

ACERBIS ITALIA S.P.A.
VIA SERIO, 37
24021 ALBINO (BG)
ITALY

U.S.A.


ACERBIS U.S.A. INC.
MAIL P.O. BOX 2030
SUN VALLEY, ID 83353
SHIP 110 LINDAY CIRCLE
KETCHUM, ID 83340
U.S.A.

UNITED KINGDOM


ACERBIS U.K LTD
UNIT 2 LUTON ENTERPRISE PARK
SUNDON PARK ROAD
LUTON, BEDFORDSHIRE LU3 3GU
GREAT BRITAIN

FUEL TANK HONDA CRF450R 11,5L - 3 GAL SERBATOIO HONDA CRF450R 11,5L - 3 GAL


COD. 500005675 REV.5

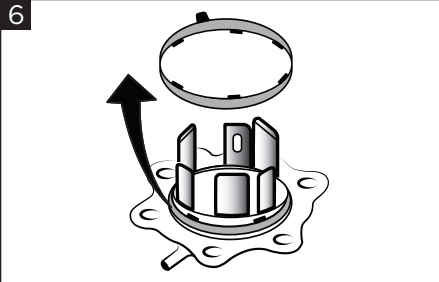


6
Remove the original seal from the fuel pump.
Rimuovere la guarnizione originale.

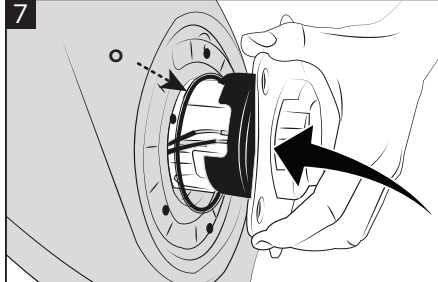


7
Insert the supplied O-Ring (O) against the Acerbis tank (A) and insert the fuel pump.
*An extra O-Ring has been supplied for future maintenance.
Inserire O-Ring (O) nella sede del serbatoio Acerbis (A). Inserire pompa su serbatoio Acerbis (A). ATTENZIONE: in caso di futura manutenzione della pompa, sostituire O-Ring con quello fornito di ricambio.

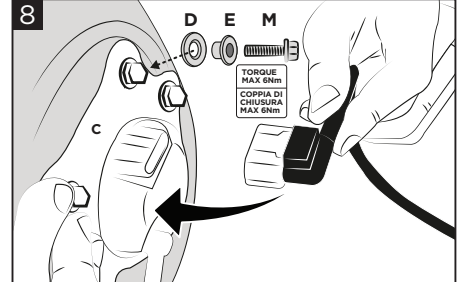


8
Install the fuel pump with the supplied (M) bolts and the OEM bushings and washers.
ATTENTION: when tightening maximum torque spec 6Nm.
Riavvitare pompa e collegare utenze.
ATTENZIONE: rispettare coppia di chiusura indicata in figura.

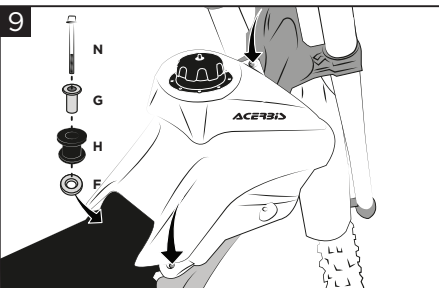


9
Install the Acerbis tank (A) using the supplied hardware (N), (G), (H), and (F) as indicated in the diagram.
Montare serbatoio Acerbis (A) usando i componenti in dotazione (N), (G), (H) e (F) come indicato in figura.

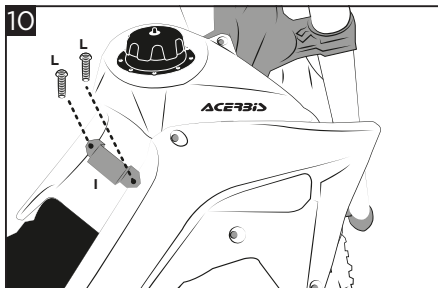

10
Install the bracket (I) and fasten with the screws (L).
Montare la staffa (I) e fissare tramite le viti (L).

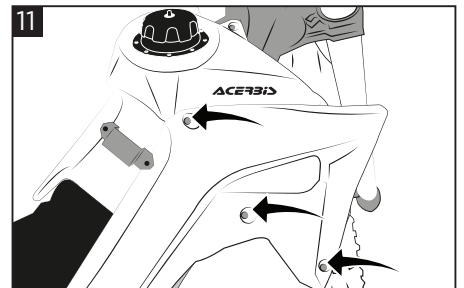

11
Install the radiator shrouds.
Rimontare i fianchetti fissando per prima la vite radiatore.

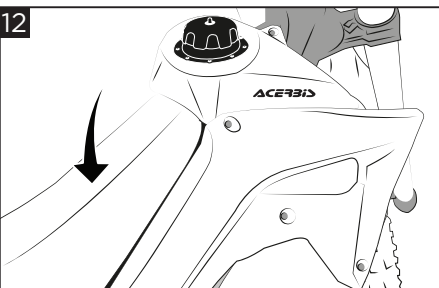

12
Install the seat.
Rimontare la sella.

DISCLAIMER

Due to uncontrolled variables in the manufacturing process of rotational molded fuel tanks, the fuel tank may vary in size and shape by up to 7% of the manufacturer's original listed capacity.

LIBERATORIA

A causa di variabili inponderabili nel processo di stampaggio rotazionale dei serbatoi, questi possono differire in forma e dimensioni fino al 7% rispetto alla capacità dichiarata.

FOR COMPETITION USE ONLY - SOLO PER USO MOTOCICLISTICO

WARNING!

It is EXTREMELY IMPORTANT that the fuel tank is properly installed. To ensure proper installation, it is STRONGLY RECOMMENDED that the tank is installed only by a qualified OEM licensed dealership mechanic. Improper installation could result in serious injuries or death.

If self-installed NOTE THE FOLLOWING: particular attention must be paid to excessive fuel line length and fuel line proximity to hot engine areas and pipes to prevent fire.

Clean tank interior thoroughly before installation. Install this fuel tank only in a well ventilated area, as gasoline fumes are extremely dangerous. Do not start or operate the vehicle if there are any fuel leaks! Read all instructions first before beginning installation.

EUROPE

ACERBIS ITALIA S.P.A.
VIA SERIO, 37
24021 ALBINO (BG)
ITALY

U.S.A.

ACERBIS U.S.A. INC.
MAIL P.O. BOX 2030
SUN VALLEY, ID 83353
SHIP 110 LINDAY CIRCLE
KETCHUM, ID 83340
U.S.A.

UNITED KINGDOM

ACERBIS U.K LTD
UNIT 2 LUTON ENTERPRISE PARK
SUNDON PARK ROAD
LUTON, BEDFORDSHIRE LU3 3GU
GREAT BRITAIN