


# SKID PLATE KTM EXC 250/300

SOTTOMOTORE KTM EXC 250/300

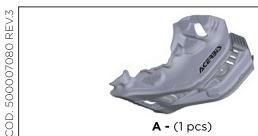

Inserire le boccole (C) nelle viti (B).

#### **ACERBIS PARTS**







A - (1 pcs)

**B** - (2 pcs)


C - (2 pcs)

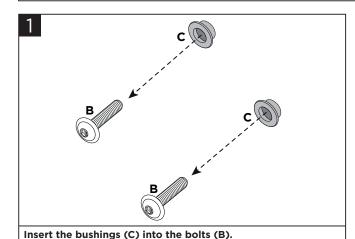

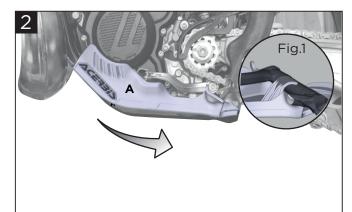

With force, push the skid plate (A) back towards the rear as indicated with the arrow. Make sure that the hook on the back of the skid plate is securely placed up and over the rear frame support tube (figure 1).

Spingere con forza il sottomotore (A) verso la parte posteriore della moto, come indicato dalla freccia. Accertarsi che il gancio del sottomotore si incastri sopra il traversino tondo del telaio

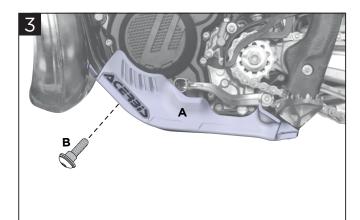

## Secure the Skidplate (A) to the frame by tightening the bolts


Fissare il sottomotore (A) al telaio, serrando le viti (B).

### **ATTENTION**

The bushings must be inserted in the screws before being mounted on the

#### **ATTENZIONE**

Le boccole devono essere inserite nelle viti prima di essere montate sul sottomotore.

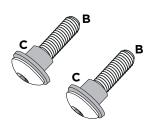

Follow mounting instruction exactly. Ensure that the mounting is secure before riding. These handguards will not prevent injury in the event of a crash. They are designed to protect the hands from cold weather. Be sure that you follow the instruction for installing the handguards. Do not ride with a brocken tie wrap. Check to be sure the throttle and other controls are free every time you ride. Failure to heed instruction and this warning could lead to interference with the controls, loss of control of the motorcycle, and an accident.

#### **EUROPE**

ACERBIS ITALIA S.P.A. VIA SERIO, 37 24021 ALBINO (BG) ITALY

#### U.S.A.

ACERBIS U.S.A. INC. MAIL P.O. BOX 2030 SUN VALLEY, ID 83353 SHIP 110 LINDAY CIRCLE KETCHUM, ID 83340 USA

#### UNITED KINGDOM

ACERBIS U.K LTD UNIT 2 LUTON ENTERPRISE PARK SUNDON PARK ROAD LUTON, BEDFORDSHIRE LU3 3GU GREAT BRITAIN