

**PARAMANI ENDURANCE/MULTICONCEPT/SUPERMOTO/  
MULTIPLIO "E"/MULTIPLIO"R"**

COD. 500002665 REV2

**ACERBIS PARTS**

**A - (2 pcs.)**



**B (2 pcs.)**

**C (4 pcs.)**

**F (2 pcs.)**

**G**

**(4 pcs.)**

**D**

**(4 pcs.)**



**E**

**(4 pcs.)**

**H - (2 pcs.)**


**I - (2 pcs.)**

NON INCLUSI PER MANUBRIO IN ACCIAIO  
(Endurance handguard not included)

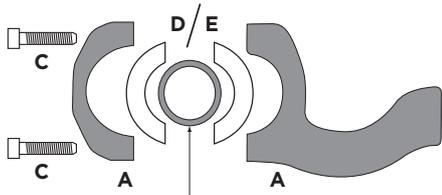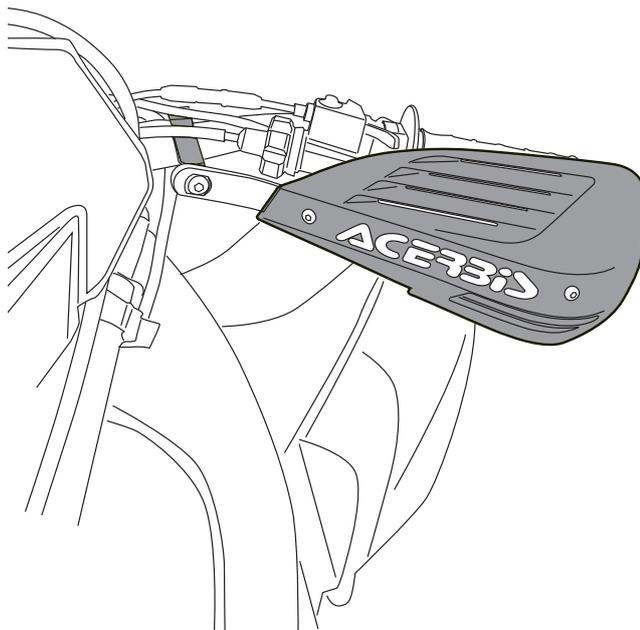

**MANUBRIO/HANDLEBARS**

**per MANUBRIO  
for HANDLEBARS**

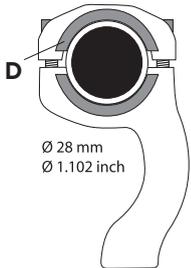


Ø 28 mm  
Ø 1.102 inch

posizione corretta per  
il pezzo D su manubrio  
Ø 28mm



correct position of the  
parts D on handlebar  
Ø 28mm, 1.102inch


**per MANUBRIO  
for HANDLEBARS**

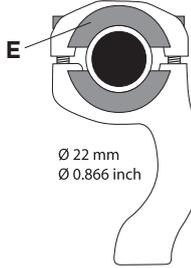

Ø 22 mm  
Ø 0.866 inch

PER MANUBRIO IN ACCIAIO  
(Paramani per manubrio non include le parti H e I)

FOR STEEL HANDLEBARS  
(Endurance handguard not included parts H and I)

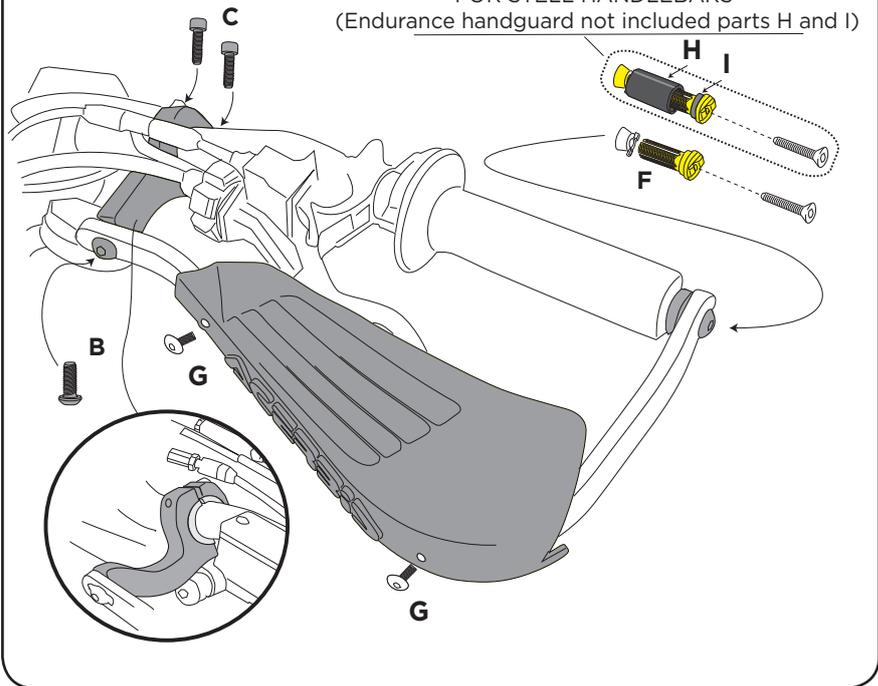

**1.**

**WARNING!**

These handguards will not prevent injury in the event of a crash. They are designed to deflect the hands from cold weather and impact with small branches you might hit and flying debris. Be sure that you follow the instructions for installing the handguards. Check to be sure the throttle and other controls are free every time you ride. Cut the end of both grips and throttle tube to install bar inserts [F]. Make sure the throttle tube is spaced far enough away so the throttle tube does not stick. Use low strength loc-tite on all nuts and bolts. For tapered bars use the big end of the tapered spacers [D] toward the outside of the bars, the non-tapered spacers [E] are for 7/8 bars. Follow diagram above for mounting the clamps and inserts. Failure to read instructions and this warning could lead to interference with the controls, loss of control of the motorcycle, and accident.