

FUEL TANK KTM EXC/EXCF 15 LT - 3,9 GAL SERBATOIO 15 LT KTM EXC/EXCF

COD. 500007068 REV.4

ACERBIS PARTS



A - (1 PCS)



B - (4 PCS)



C - (4 PCS)



H - (4 PCS)

O.E.M ITEMS TO USE:



D - (1 PCS)



E - (1 PCS)



F - (1 PCS)



G - (1 PCS)

WARNING



Durante il rimontaggio suggeriamo vivamente di utilizzare un grasso anti-grippante sulle viti che entrano negli inserti in metallo.

Highly suggest to use anti-seize/grease lubricant on all bolt threads going into the tank's metal inserts when reinstalling.


WARNING




ATTENZIONE: All screws self-forming max torque 2.5 Nm.




ATTENTION: Tutte le viti autofornanti coppia di chiusura max 2,5 Nm.

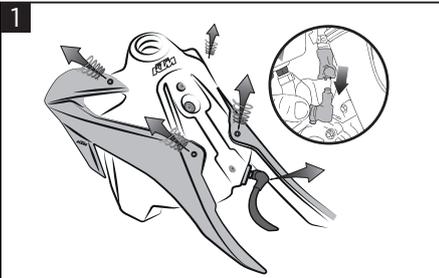

1
Remove the radiator scoops. Disconnect the fuel pump cover cable and the fuel connector as indicated in the diagram.
Togliere i fianchetti. Sconnettere il cavo di alimentazione della pompa. Scollegare connettore benzina.

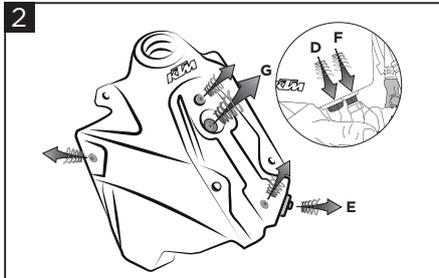

2
Remove seat screw and the screws on the side. Remove the tank screw (G), then empty any remaining fuel from the tank. Remove the (D)/(E)/(F) fasteners and remove the fuel pump.
Togliere le viti della sella e degli attacchi laterali. Togliere la vite del serbatoio (G). Svuotare completamente la benzina dal serbatoio e rimuovere le utenze (D)/(E)/(F).

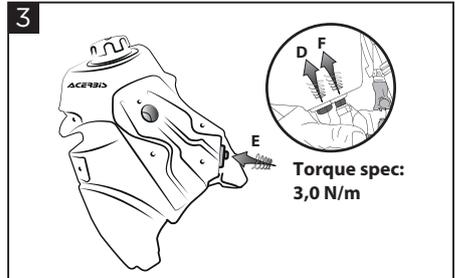

3
On the fuel tank Acerbis (A), reconnect the fuel pump (E) using the screws (H) with the original hardware (D)/(F).
Sul serbatoio Acerbis (A), rimontare la pompa (E) utilizzando le viti (H) e le utenze (D)/(F).
Torque spec: 3,0 N/m

WARNING!

It is **EXTREMELY IMPORTANT** that the fuel tank is properly installed. To ensure proper installation, it is **STRONGLY RECOMMENDED** that the tank is installed only by a qualified OEM licensed dealership mechanic. Improper installation could result in serious injuries or death. If self-installed **NOTE THE FOLLOWING**: particular attention must be paid to excessive fuel line length and fuel line proximity to hot engine areas and pipes to prevent fire.

Clean tank interior thoroughly before installation. Install this fuel tank only in a well ventilated area, as gasoline fumes are extremely dangerous. Do not start or operate the vehicle if there are any fuel leaks! Read all instructions first before beginning installation.

Acerbis recommends that installation must be done by a licensed mechanic and that only Acerbis' original parts are used during installation. Acerbis makes no guarantees or representations, express or implied, regarding the fitment of its product for any particular purpose. Acerbis makes no guarantees or representations, express or implied, regarding the extent to which its products protect individuals or property from injury or death or damage.

EUROPE

ACERBIS ITALIA S.P.A.
VIA SERIO, 37
24021 ALBINO (BG)
ITALY

U.S.A.


ACERBIS U.S.A. INC.
MAIL P.O. BOX 2030
SUN VALLEY, ID 83353
SHIP 110 LINDAY CIRCLE
KETCHUM, ID 83340
U.S.A.

UNITED KINGDOM

ACERBIS U.K LTD
UNIT 4 DUNFERMLINE COURT,
KINGSTON, MILTON KEYNES
MK10 0BY
GREAT BRITAIN


FUEL TANK KTM EXC/EXCF 15 LT - 3,9 GAL SERBATOIO 15 LT KTM EXC/EXCF

COD. 500007068 REV.4

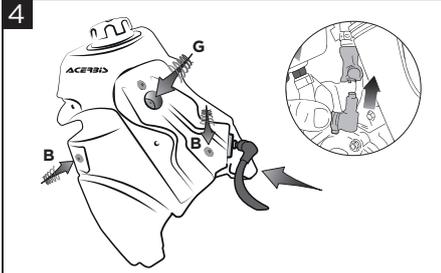


4
Place the Acerbis fuel tank (A) on the bike. Insert the tank screw (G). Insert the seat screws (B) as indicated in the diagram. Reconnect the fuel pump power cable and the fuel connector.

Posizionare il serbatoio Acerbis sulla moto. Riavvitare la vite serbatoio (G). Rimettere le viti (B) della sella e degli attacchi laterali. Connettere il cavo di alimentazione della pompa e il connettore benzina.

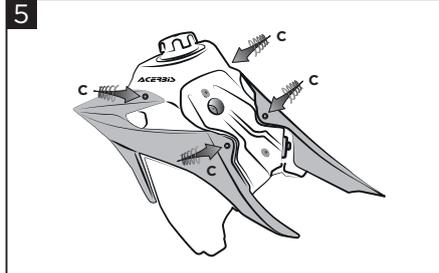

5
Assemble the radiator scoops with the screws (C).

Montare i fianchetti con le viti (C).

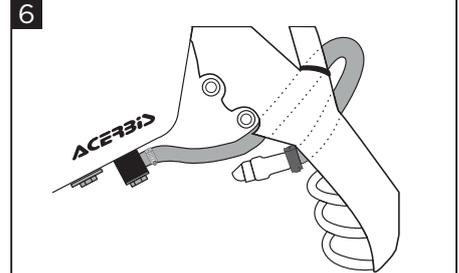

6
ATTENTION: fuel line assembly detail. Attach the KTM fuel line (F) to the Acerbis tank (A) as indicated in the diagram. Make sure the fuel line isn't folded over, obstructing the fuel flow.

ATTENZIONE: dettaglio montaggio tubo/pompa. Fissare il tubo pompa come indicato. Fare attenzione che il tubo piegandosi non crei strozzature.

DISCLAIMER

Due to uncontrolled variables in the manufacturing process of rotational molded fuel tanks, the fuel tank may vary in size and shape by up to 7% of the manufacturer's original listed capacity.

LIBERATORIA

A causa di variabili inponderabili nel processo di stampaggio rotazionale dei serbatoi, questi possono differire in forma e dimensioni fino al 7% rispetto alla capacità dichiarata.

FOR COMPETITION USE ONLY - SOLO PER USO MOTOCICLISTICO

WARNING!

It is **EXTREMELY IMPORTANT** that the fuel tank is properly installed. To ensure proper installation, it is **STRONGLY RECOMMENDED** that the tank is installed only by a qualified OEM licensed dealership mechanic. Improper installation could result in serious injuries or death.

If self-installed **NOTE THE FOLLOWING**: particular attention must be paid to excessive fuel line length and fuel line proximity to hot engine areas and pipes to prevent fire.

Clean tank interior thoroughly before installation. Install this fuel tank only in a well ventilated area, as gasoline fumes are extremely dangerous. Do not start or operate the vehicle if there are any fuel leaks! Read all instructions first before beginning installation.

Acerbis recommends that installation must be done by a licensed mechanic and that only Acerbis' original parts are used during installation. Acerbis makes no guarantees or representations, express or implied, regarding the fitment of its product for any particular purpose. Acerbis makes no guarantees or representations, express or implied, regarding the extent to which its products protect individuals or property from injury or death or damage.

EUROPE

ACERBIS ITALIA S.P.A.
VIA SERIO, 37
24021 ALBINO (BG)
ITALY

U.S.A.

ACERBIS U.S.A. INC.
MAIL P.O. BOX 2030
SUN VALLEY, ID 83353
SHIP 110 LINDAY CIRCLE
KETCHUM, ID 83340
U.S.A.

UNITED KINGDOM

ACERBIS U.K LTD
UNIT 4 DUNFERMLINE COURT,
KINGSTON, MILTON KEYNES
MK10 0BY
GREAT BRITAIN