ACER313

X-FACTORY HANDGUARDPARAMANO X-FACTORY


ACERBIS PARTS

A-(2 pcs)

A-(2 pcs)

A-(2 pcs)


A-(4 pcs)

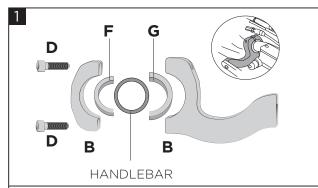


Mount the bracket (B) on the handlebar using the screws (D) and if necessary use the spacers (F) or (G).

Montare il bracciale (B) sul manubrio tramite le viti (D) e se


necessario utilizzare i distanziali (F) o (G).

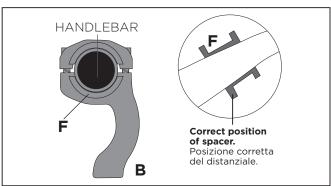

Use the spacer (F) for handlebars fatbar 28mm/1.102 inch. Utilizzare il distanziale (F) per manubri fatbar da 28mm/1.102

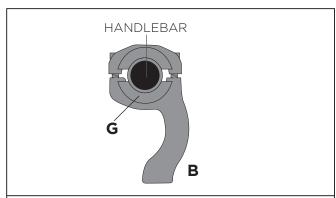

Use the spacer (G) for handlebars 22mm/0.866 inch.Utilizzare il distanziale (G) per manubri da 22mm/0.866 pollici.

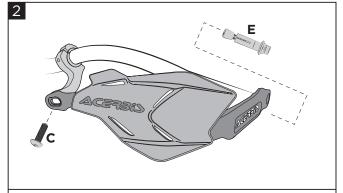

Mount the hanguard to the bracket through screws (C) and fix to the handlebar through the expander (E).

Montare il paramano al bracciale tramite vite (C) e fissare al manubrio tramite expander (E).

WARNING!

Follow mounting instruction exactly. Ensure that the mounting is secured before riding. These handguards will not prevent injury in the event of a crash. They are designed to protect the hands from cold weather. Be sure that you follow the instructions for mounting the handguards. Do not ride with a broken tie wrap. Check that the throttle and other controls are free every time you ride. Failure to heed instruction and this warning could lead to interference with the controls, loss of control of the motorcycle, and accidents. Acerbis recommends that installation must be done by a licensed mechanic and that only Acerbis' original parts are used during installation. Acerbis makes no guarantees or representations, express or implied, regarding the fitment of its product for any particular purpose. Acerbis makes no guarantees or representations, express or implied, regarding the extent to which its products protect individuals or property from injury or death or damage.

EUROPE

ACERBIS ITALIA S.P.A. VIA SERIO, 37 24021 ALBINO (BG) ITALY

U.S.A.

ACERBIS U.S.A. INC. MAIL P.O. BOX 2030 SUN VALLEY, ID 83353 SHIP 110 LINDAY CIRCLE KETCHUM, ID 83340 U.S.A.

UNITED KINGDOM

ACERBIS U.K LTD UNIT 4 DUNFERMLINE COURT, KINGSTON, MILTON KEYNES MKIO OBY GREAT BRITAIN